


SET-UP OF OPTIONAL MOBILE FLOORSTAND FOR i3CONNECT WALNUT W1 138" AND 165"

ⓘ Details of this manual are subjected to change due to technical or aesthetical improvements.



SCOPE OF THIS MANUAL

To assemble the optional Mobile Floorstand for i3CONNECT WALNUT W1 138" and 165"

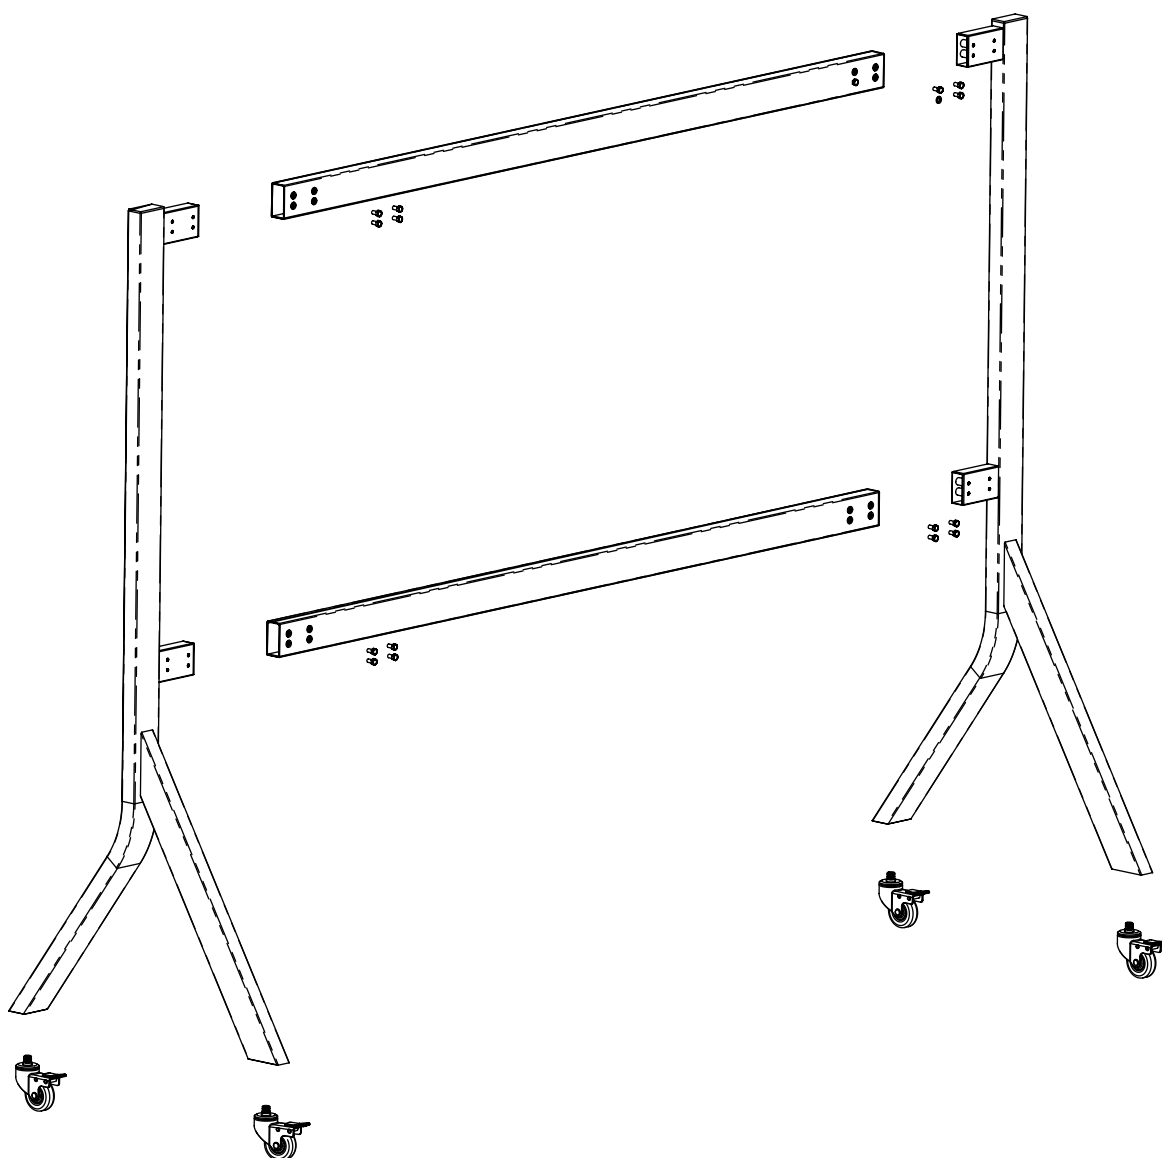

WHAT YOU'LL FIND INSIDE



- Left Leg (1x)
- Right Leg (1x)
- Castors (4x)
- Cross Bars (2)
- Screws to connect Legs and Bars (16x)
- Screws to assemble Hanging Bar Profiles

Hanging Bar Profiles come with the package of the display


STEP 5

Fix the profiles together

(The materials for the profiles can be found in the Walnut W1 138" or 165" box)


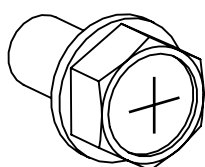
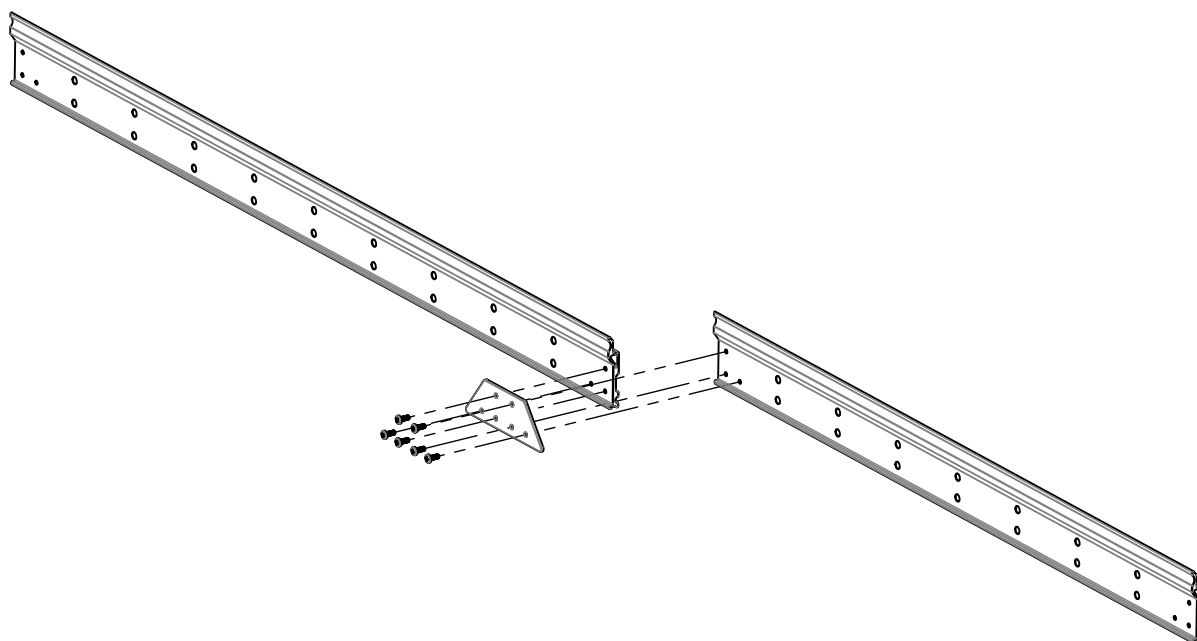


M6x16 (6x)

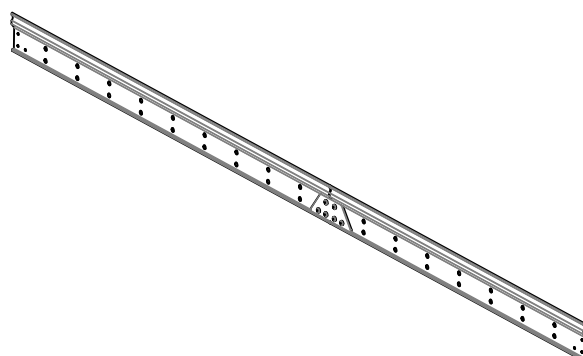




STEP 1

Install castors to the right leg

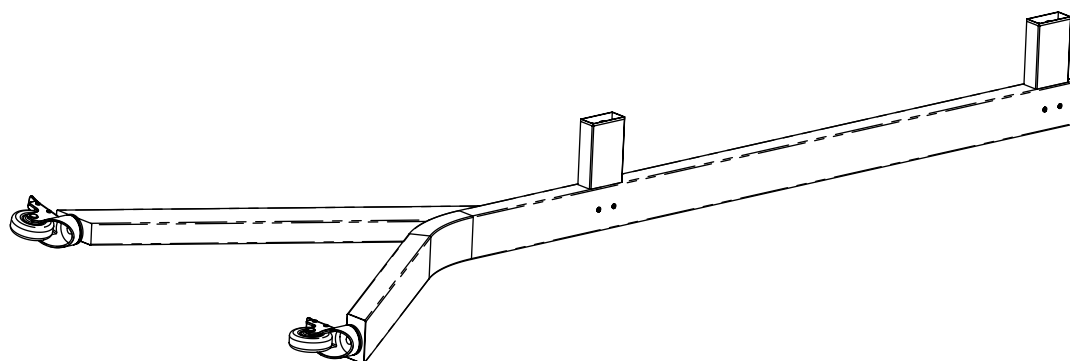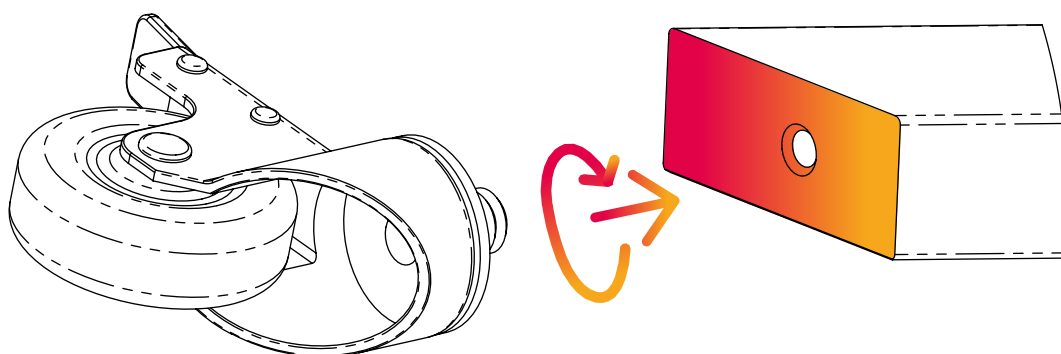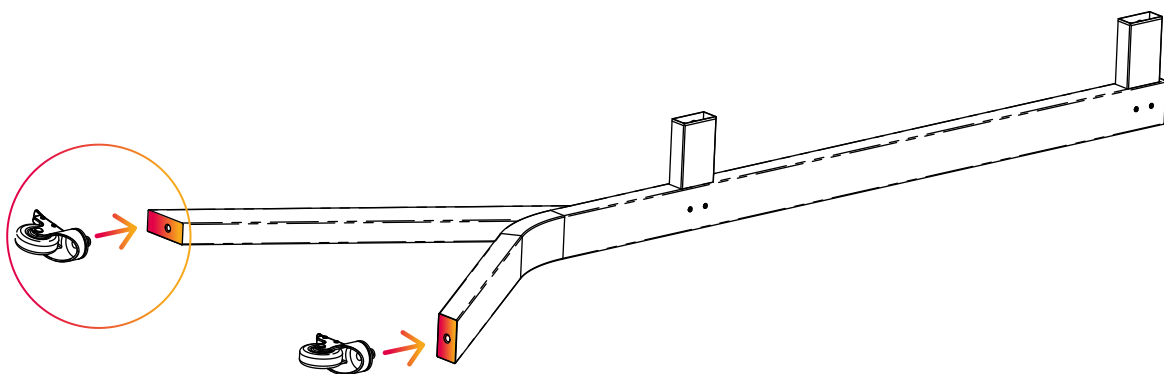



STEP 2

Install castors to the left leg

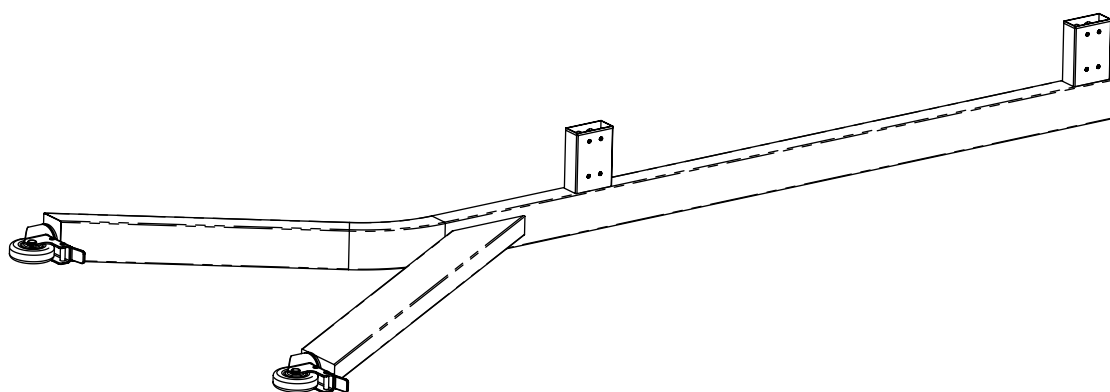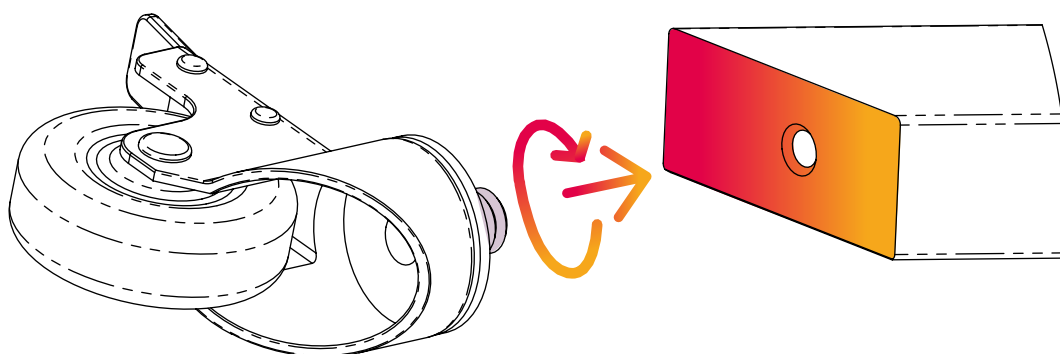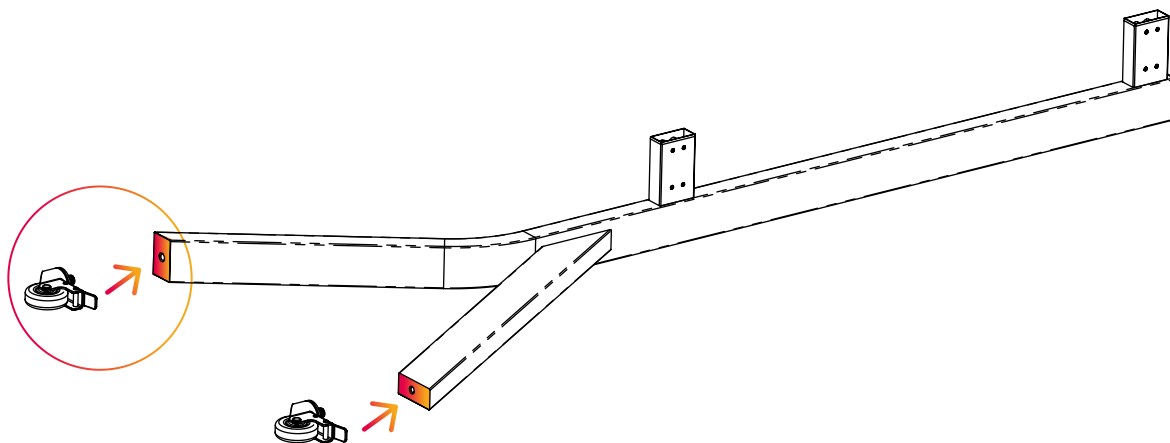


STEP 3

Fix the cross bars to the left leg

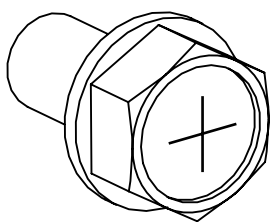
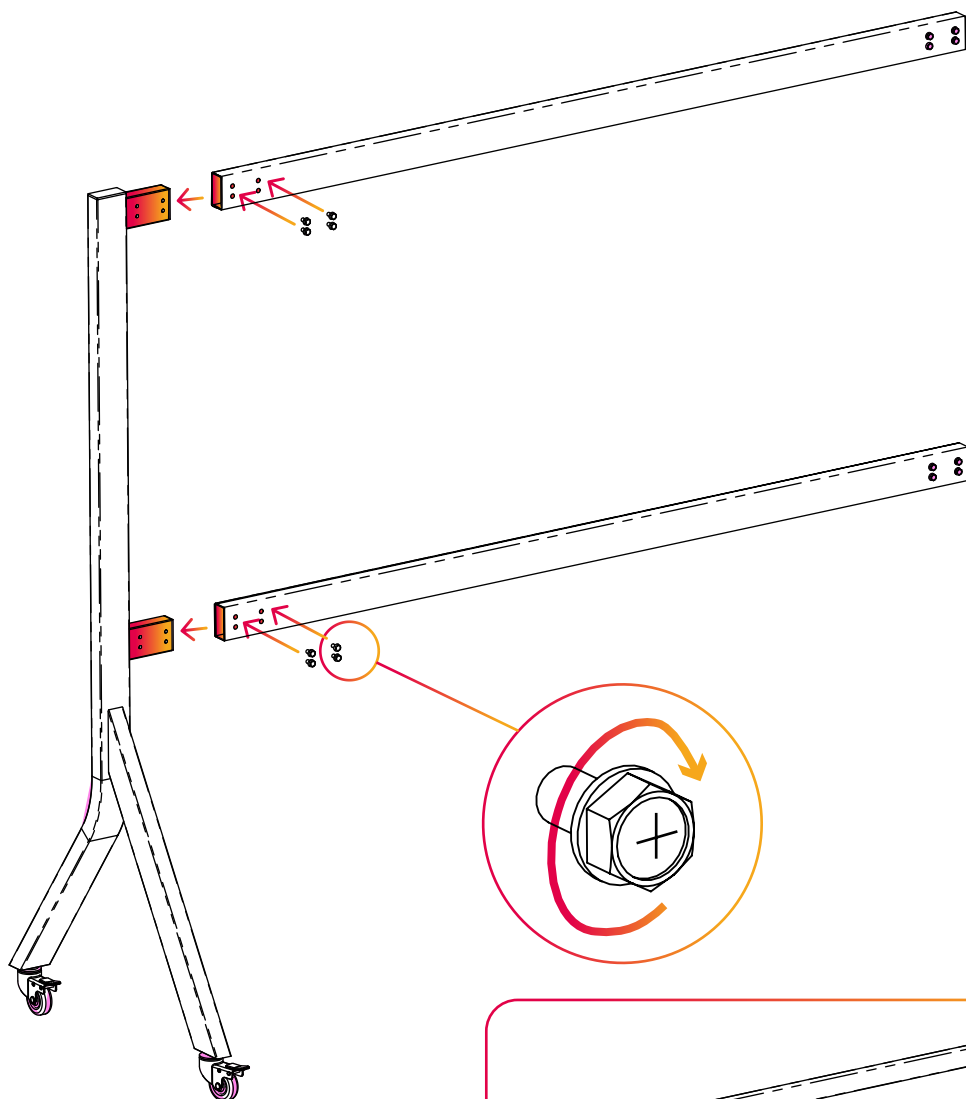


M8x20 (8x)

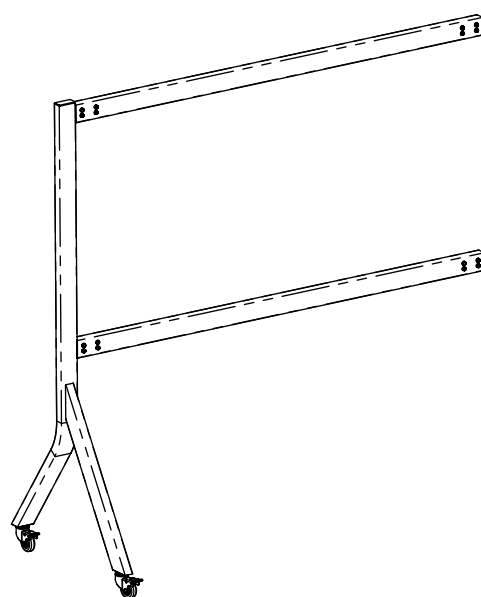


STEP 4

Fix the cross bars to the right leg

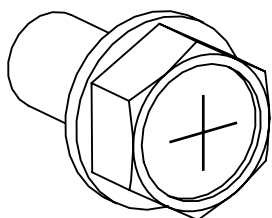
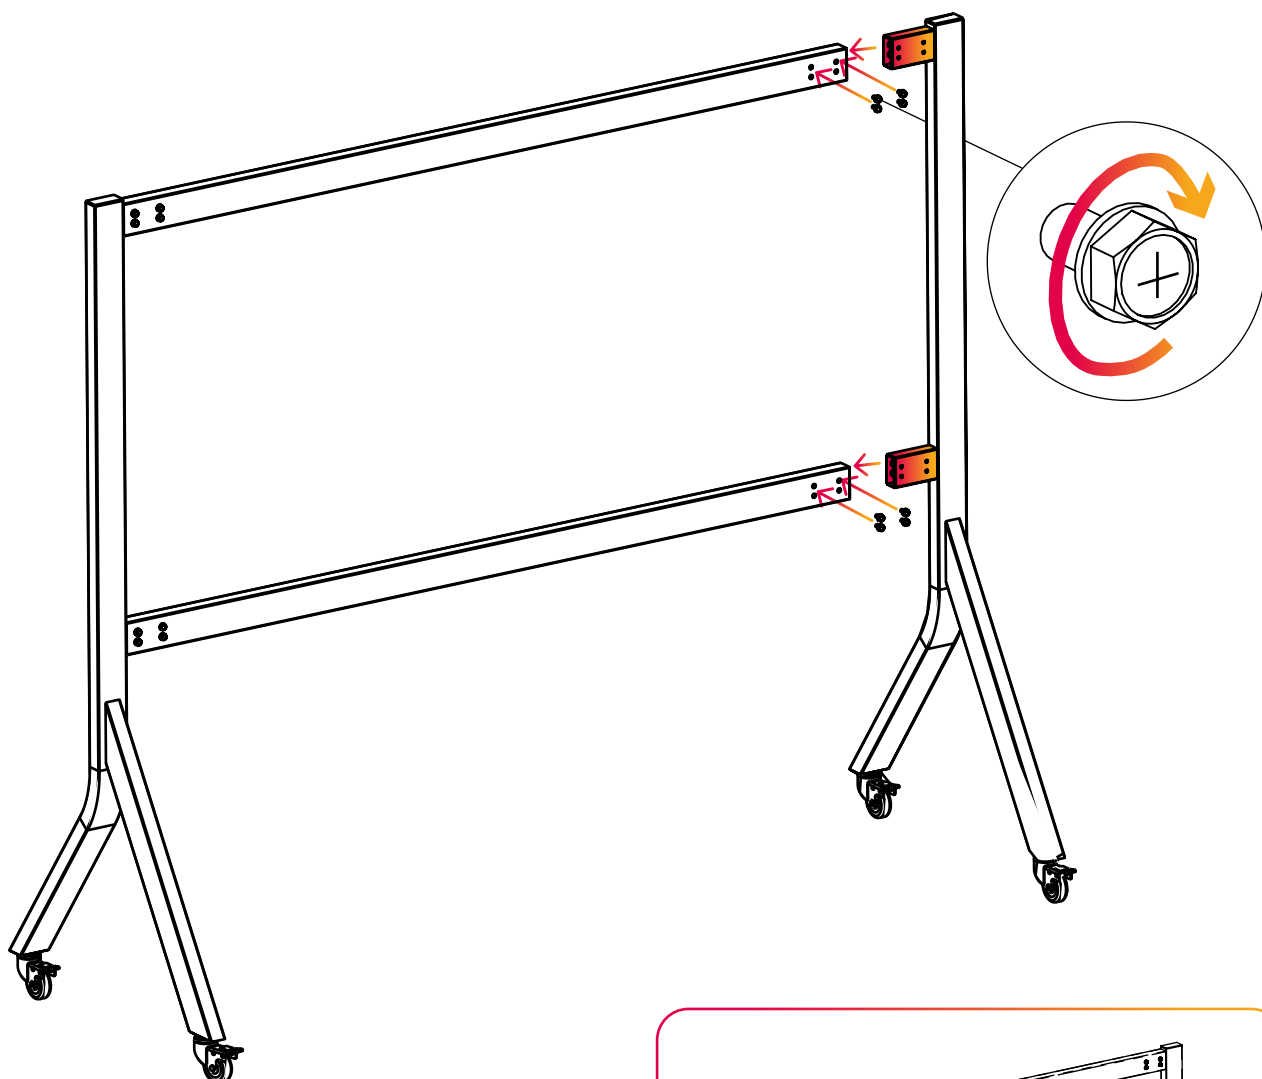


M8x20 (8x)

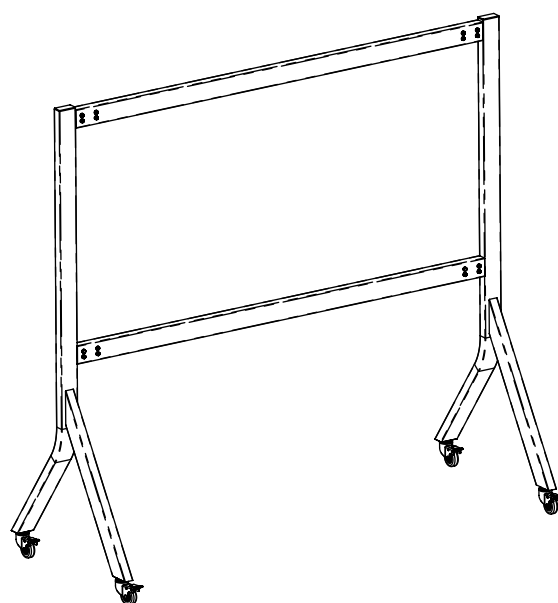


STEP 6

Fix the profiles to the mobile frame

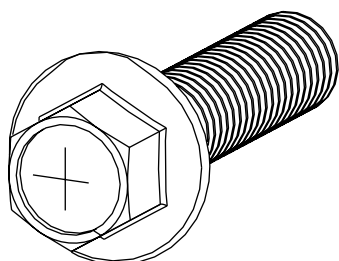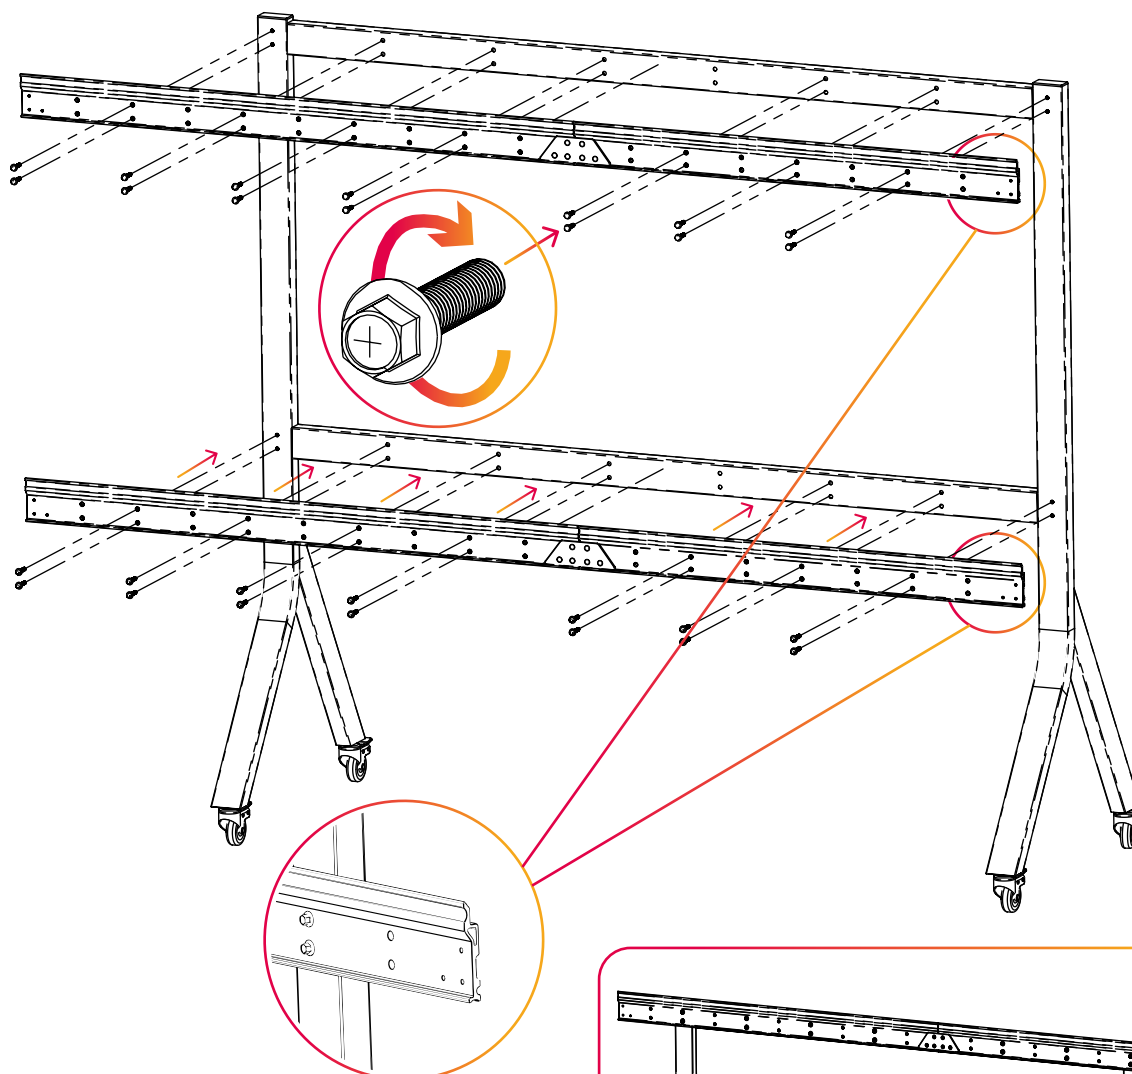

M8x35 (28x - 135") (32x - 165")

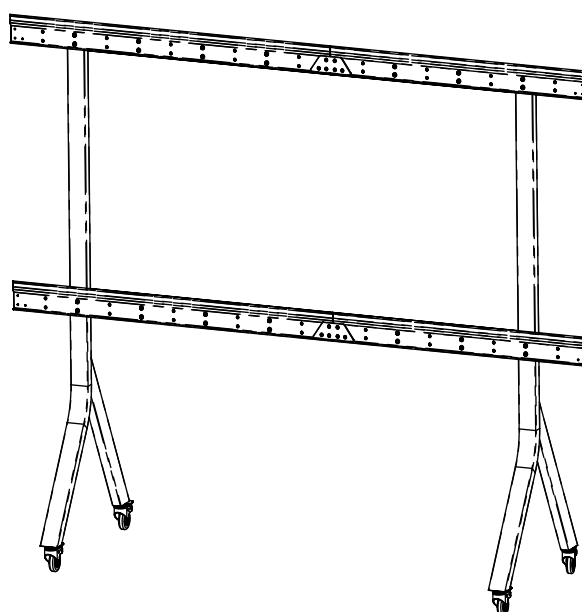

STEP 7

Follow the i3CONNECT Walnut W1 manual on how to install the leds onto the mount

